

## The Heritor *Aries* Timepiece

(HR4401 – HR4406)

Mechanical automatic watches harness the kinetic energy contained within the natural movement of your arm to generate the force required to operate. The watch will commence operation after a sufficient volume of initial power has been generated by handling / wearing or by manually winding the crown. Supplemental winding through wear or manual winding will ensure sustained functionality and increase the duration in which the watch will continue to operate when unworn.



### Setting Instructions

- 1) Pull the crown out one click to the time setting position.
- 2) Zero the sub dial hands and primary hands:
  - rotate the crown counterclockwise until the sub dial hands point at the 12 o'clock position,
  - rotate the crown clockwise until the primary hands point at the 12 o'clock position.
- 3) Set the sub dial to the desired time by rotating the crown counterclockwise.
- 4) Set the primary hands to the desired time by rotating the crown clockwise.
- 5) Push the crown in to its rest position to commence timekeeping.
- 6) Manually wind the mainspring by rotating the crown clockwise 10-20 times.

### Water Resistance Guidelines

**5 ATM** – light contact and short duration resistance only. Not suitable for bathing, swimming, diving, or extended periods of contact. **Note:** manipulation of the crown while the watch is in contact with water will negate the rated water resistance as water penetration may occur.