

# Axwell Ascent Timepiece



## **POS. I - POSITION OF REST (CROWN SECURED)**

## **POS. II - CROWN PULLED OUT 1 CLICK**

## **POS. III - CROWN PULLED OUT 2 CLICKS.**

## **POS. II- QUICK-CHANGE CORRECTION FOR DATE**

The date can also be corrected during the day-changing phase between 10pm and midnight.

The date of the following day has to be set, because no automatic date change takes place at midnight.

1. Unscrew and pull the crown out to position II (watch still running).
2. Turn the crown clockwise until the required date appears.
3. Push the crown back into position I and screw down until fully seated.

## **QUICK-CHANGE CORRECTION FOR 24-HOUR DISPLAY**

1. Unscrew and pull the crown out to position II (watch still running).
2. Turn the crown counterclockwise until the desired time appears.
3. Push the crown back into position I and screw down until fully seated

## **POS. III-SETTING THE TIME**

1. Unscrew and pull the crown out to position III (watch stopped).
2. Turn the crown, until the current time is displayed (remember the 24-hour cycle).
3. Push the crown back into position I and screw down until fully seated.

## **WATER RESISTANCE GUIDELINES-**

**20 ATM** - suitable for all forms of water contact within indicated depth marking. Not suitable for deep sea diving.

**NOTE:** The crown must be fully screwed down to achieve the rated water resistance. Additionally, manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance, as water penetration may occur.